



Problem:

My garbage disposal stopped spinning all together.

Solution:

1) Turn wall switch off to garbage disposal.

2) Unplug garbage disposal.



3) Inspect the garbage disposal for a jam like silverware or food. Remove any items that are stuck in the disposal using tongs or pliers.

*** Never put your hand in the disposal.**



4) Press the reset button on the side of the disposal.



5) Plug garbage disposal back in.

6) With water running, test garbage disposal with switch.

7) If disposal still does not operate, contact Management.

Reference Video : <https://www.youtube.com/watch?v=HrGmXDzkKno>